


Quickstart User-Manual for controller LogicData Compact

1) First power-on

(Controller, hand switch and drive system are connected)

Attention: The start-up must be carried out with the drive system in an installed state!

Display flashes **068**

➡ Press  until the lower end position is reached.

*The system moves down with half speed.
Moving up is not possible.*

➡ Adjust the shown height with the buttons **1** and **2**.

*Press button **1** to increment the height
Press button **2** to decrement the height
Moving up or down is not possible.*

➡ Press  to confirm

*After the confirmation the display flashes **088***

➡ Move with  to the upper limit.

You do not have to move to the absolute limit of travel.

➡ Adjust the actual measured height with the buttons **1** and **2**.

*Press button **1** to increment the height
Press button **2** to decrement the height*

➡ Confirm with .

*After the confirmation the height is shown.
The control box is ready for normal operation.*

2) Power-on after power failure or transport

Display flashes **000**


➡ Press  until the lower end position is reached.

*The desk moves down with half speed.
Moving up is not possible.*

After the desk has reached the lower end position, the display shows the actual height and the control box is ready for normal operation.


3) Reset (Delivery status) / Activate programming mode

 Press  and  and  simultaneously.


Display shows 


 Change with  and  to .

 Confirm with 

Display flashes 
Controller is in delivery mode or can be reprogrammed

4) Stroke programming / reprogramming

 Activate programming mode (See point 3)

 Carry out the steps of „first power-on“ (see point 1)

The system is now set up.

Note:

In programming mode, the system runs at half force and speed. If there are blockages, the system can be easily helped.

Further information at www.logicdata.at